VIZIO

EXTREME TECHNOLOGY

QUICKSTART GUIDE
VF551XVT LED **HDTV**

1 BEFORE YOU BEGIN

What's In the Box

- VIZIO HDTV
- VIZIO Universal Programmable Remote Control with Learning Function (including 2 AA batteries)
- User Manual (read Safety Guidelines)
- Registration Card
- Quickstart Guide
- Power Cord
- Premium Screen Cleaning Cloth

2 INSTALLING YOUR HDTV

Welcome to the VIZIO family! By purchasing this XVT HDTV you're getting the latest in High Definition technology at a value you've come to expect from VIZIO. The base of this TV is pre-assembled so you'll be enjoying your new HDTV in a matter of minutes. Should wall mounting be more your style, the base can be easily removed. Check out our extensive array of VIZIO certified mounts which is sure to have a mounting solution that's right for you.

We provide professional installation services. Visit **www.VIZIO.com** or call **(888) 849.2623** to order today!

Preparing the TV for Wall Mounting - please refer to "Wall mounting your HDTV" in your User Manual for more information.

MATCH YOUR VIZIO TO A **CERTIFIED* WALL MOUNT**

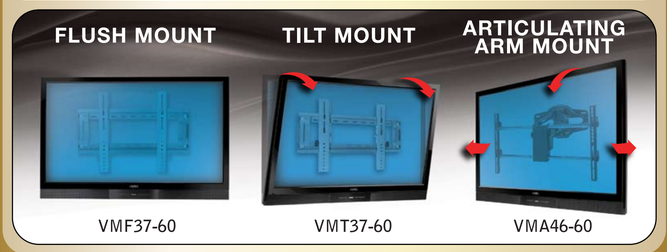

*Tested and certified by VIZIO engineers for compatibility with your TV.

©2009 VIZIO Inc.

192513011180

3 CONNECTING TO DEVICES

YOU DESERVE **THE BEST!**

The GREEN inputs are OPTIMIZED for High Definition Video and Audio. Connect using these inputs wherever possible.

CONNECTION ADVICE	BEST	GOOD	COMPATIBLE
PICTURE QUALITY	HIGHEST DIGITAL QUALITY PICTURE	ANALOG HD QUALITY PICTURE	LOW RESOLUTION NOT RECOMMENDED
CONNECTION TYPE	HDMI, DTV/TV	COMPONENT	AV/S-VIDEO
CONNECTOR IMAGE			

MAKE THE BEST HIGH DEFINITION CONNECTION!

VIZIO HIGH DEFINITION CABLES

For more information about VIZIO Certified* High Definition cables please visit us at: **www.VIZIO.com**

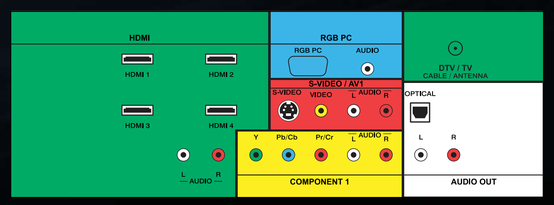

BACK OF TV

SIDE OF TV

YOUR VIZIO TV EVEN HAS EASY TO ACCESS SIDE INPUTS

4 POWER THE TV

Turn on your TV by pressing the Power button on either the TV or the remote control.

HDTV TIPS

Make sure you have components with HDMI outputs to ensure the BEST possible picture.



3 WAYS TO WATCH **HIGH DEFINITION VIDEO**

1. Get a VIZIO Blu-ray™ Disc Player.
2. Contact your cable company or satellite provider to learn more about HD programming in your local area (an HD cable box or satellite receiver may be required).
3. You may be able to get HD signals using an off-air antenna. To see if you can receive off-air HD signals, and for help choosing the right antenna, visit

www.antennaweb.org

HIGH DEFINITION HOME THEATER

VIZIO Blu-ray™

Bring your movies to life! 1080p Full HD playback delivers crystal clear images with lifelike detail and High Definition Audio puts you in the center of the action. Visit **www.VIZIO.com** for more details.

HIGH-DEFINITION SOUND

Complete your total Home Theatre experience with stunning audio from VIZIO accessories such as the Sound Bar with Wireless Subwoofer.

Visit **www.VIZIO.com** or call (888) 849.4623.

VF551XVT LED **HDTV** QUICKSTART GUIDE

5 SETUP (Cont.)

1. The Initial Setup menu should appear on-screen (see Fig. 1). Follow the menu instruction using your remote control to initialize the process.
2. Select your desired language (see Fig. 2).
3. Choose Home Mode for optimal energy savings.

IF YOU'RE CONNECTING USING A CABLE OR SATELLITE BOX:

1. Exit the Setup Wizard.
2. Set your input source to match the device you're connecting to.
3. You're done! Enjoy the show.

IF YOU'RE CONNECTING USING A CABLE FROM THE WALL OR ANTENNA:

1. Choose between Antenna or Cable to match your input source (see Fig. 3).
2. Begin the scan for channels (see Fig. 4).

Note: Your Service Provider may provide access to HD channels during the channel scan. Please be patient and wait for 100% completion.

3. Once the scan is complete, follow the on-screen instruction to exit the Initial Setup menu (see Fig. 5).

Fig. 1

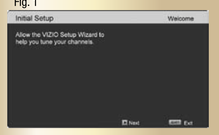

Fig. 2

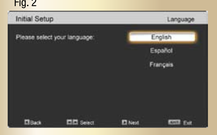

Fig. 3

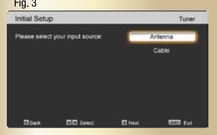

Fig. 4

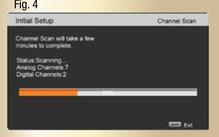

Fig. 5

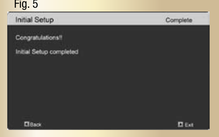

EXTENDED WARRANTIES

Protect your VIZIO product with up to 5 years of added repair service! Extended coverage begins when the manufacturer's warranty expires so you'll receive maximum protection!

Visit us online at:
www.VIZIO.com

or Call:
(888) 849. 4623
For more info on Extended Warranties

LEARN MORE

Refer to your User Manual for in-depth descriptions or more information.

REGISTER NOW

Register your product today and receive the latest VIZIO news and special offers.

www.VIZIO.com

HELP TOPICS

PROGRAM YOUR CABLE OR SATELLITE REMOTE

Call your Cable or Satellite provider to determine if you need a 3, 4 or 5-digit code. Refer to the following chart of VIZIO codes and follow your provider's instructions to program your Cable or Satellite remote.

SERVICE PROVIDER	5-DIGIT CODES	4-DIGIT CODES	3-DIGIT CODES
CABLE	11758, 10178, 10128	1758, 0178, 0128	
DIRECT TV	11758, 10178, 10128	1758, 0178, 0128	
DISH NETWORK			627

PROBLEM	SOLUTION
No Power	Make sure the power button is ON (the VIZIO logo glows white). Make sure the AC power cord is securely connected to the AC socket and try plugging the TV directly into the wall. Plug another electrical device (like a radio) to the outlet to verify the outlet is supplying power.
Picture is blurry or fuzzy/ image quality issues	For the best image quality, view HD wide screen programs where possible. If HD content is not available, view Standard Definition from a digital source. Standard analog TV will always be noticeably inferior to HD because your digital flat panel TV has video that is many times better than old TVs, and thus you can see interference and deficiencies you did not know you had.
Cannot change channels up and down with direct cable hookup from wall or antenna	Press the MENU button. Use the arrows to navigate to the TV TUNER MENU. Highlight the first option, called Tuner Mode. Select the appropriate input by using the left and right arrows. Once Tuner Mode is correct, highlight "AutoSearch", then press the right arrow.
Cannot return to the Setup Wizard	The Setup Wizard is no longer accessible after being run once, but all of the same settings can still be changed. Press the MENU button to access them. For channel scan, see the above topic.
Screen is displaying blue/no signal and/or turning off after a few seconds	Your TV may be on an inactive input. After powering on the TV, press the INPUT button on your remote repeatedly until a picture re-appears. If this does not work, try it a second time but press the button slower this time; it can take as long as 30 seconds for the image to reappear.
TV will not respond to the remote	Press the TV Button at the top of the remote to control the TV.
Black or gray bars on top, bottom, and/or sides of picture	Try setting your TV to wide or zoom mode; the image should fill the screen. If you still see bars, they are part of the image the TV is receiving. Cable and satellite boxes may add black bars to the picture, especially when HDMI cables are used. For more information, please contact your service provider.